

Scenic Series 10mm Glass-Wall Post Detail

Step 1: Determine Wall Post position against wall or column.


Note: Post spacing not to exceed 4ft center to center of posts

Step 2: Plumb Wall Post using a water level and install using 5/16" x 4" hex head lag bolts through base plate into deck.

Step 3: Recheck that Wall Post is still plumb and fasten Wall Post to wall or column using 1-#12 x 2" wood screw through pre-drilled hole in back of black glass insert and glass channel. (Hole is located 3" down from top of post)

Step 4: Before 10mm glass install remove screw from pyramid cap and remove cap

Step 5: After 10mm glass is installed, re-install pyramid cap with screw.

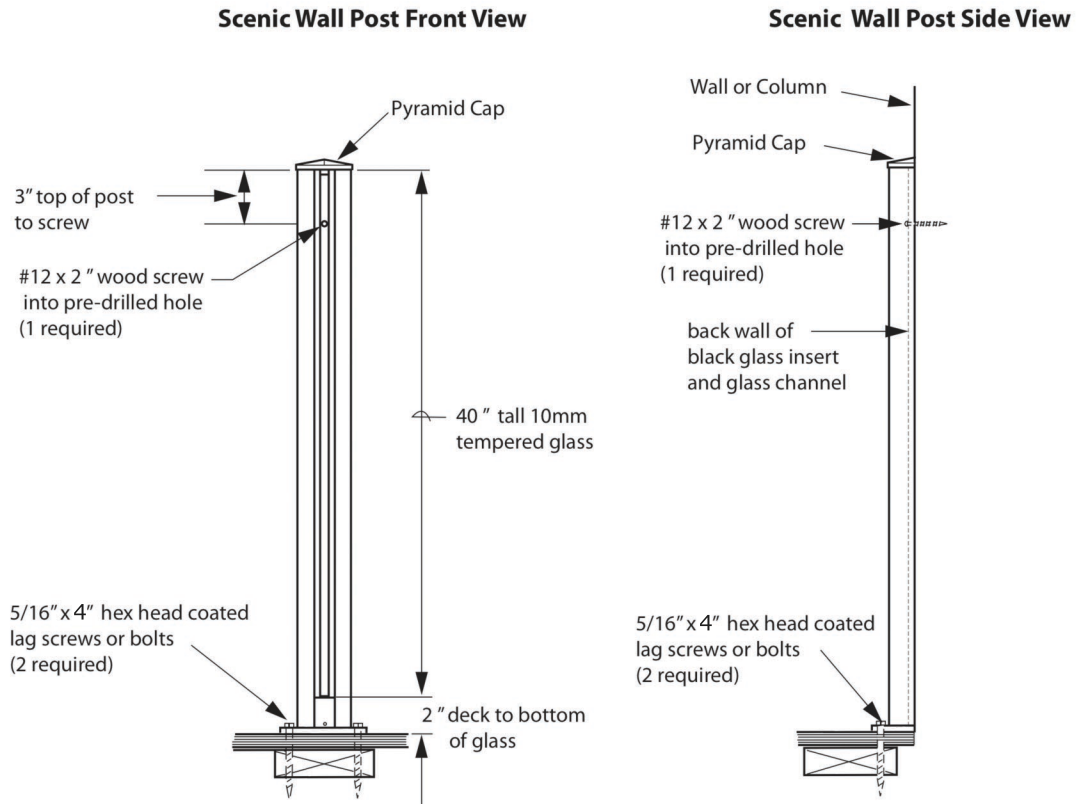

Note: If installation is in areas where there is potential of high winds or wind gusts exceeding 60 MPH/100KPH, it is advised to consult a professional engineer to determine if our product is suitable for the intended application.

It is the sole responsibility of the home owner/contractor to comply with all local Building Codes regarding all deck or fascia connections.